


QUICK USER GUIDE

V.2.0



1. INTERCOM

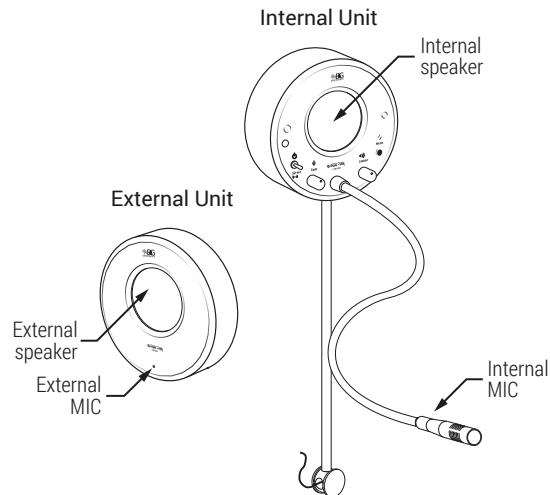

TURN ON
Pull up the switch to the ON position.
Light: green



SPEAK
At a normal volume.
Light: orange



LISTEN
To the outside audio on the internal speaker.
Light: green




TURN OFF
Push down the switch to its middle position.
Light: off

2. EMERGENCY SIREN

TURN ON
Push down the switch to *Siren*.
Light: red



TURN OFF
Pull up the switch to its middle position.
Light: off

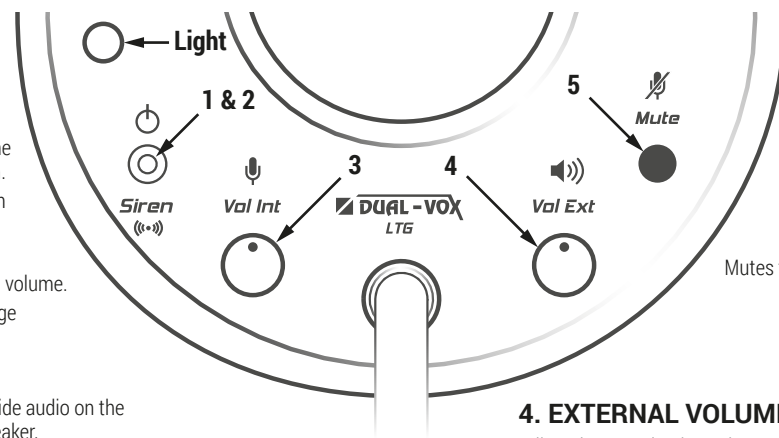

5. MUTE



Mutes the audio reproduction on the external unit.
Light: blinking green


4. EXTERNAL VOLUME

Adjust the reproduction volume on the external unit.




3. INTERNAL VOLUME


Adjust the reproduction volume on the internal unit.

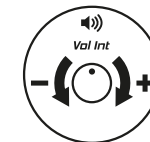

RECOMMENDATIONS

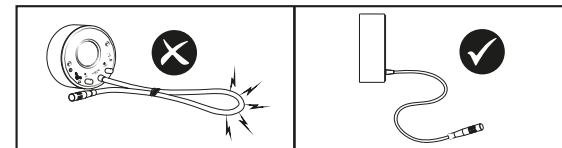

To shorten the length of the microphone, curve the neck. Forcibly bending the microphone can cause irreversible damage.

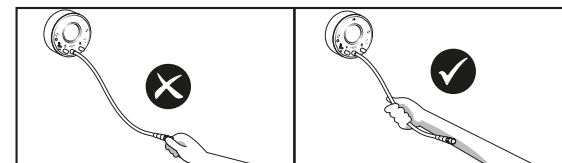

Handle the microphone by the neck and not by the tip.

CLEANING AND MAINTENANCE

- Clean the surfaces with a cloth slightly dampened with soapy water or alcohol, and remove the moisture with a dry cloth.
- Do not use any sort of solvent on the product.
- Periodically check that the mounting accessories are properly attached and apply glue if necessary.

